

# DOOR DESIGN STYLES

## STORMPROOF DESIGNS


KEY:

Design reference  
Colour reference


A to S  
C01 to C05



Abbott  
E C01

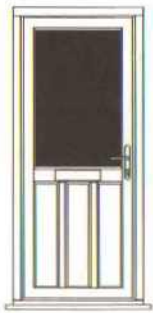


Ardeley  
F C03

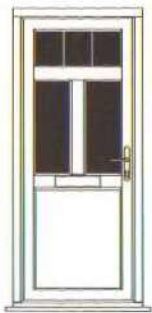


Ballingdon  
G C03




Bennett  
D C03

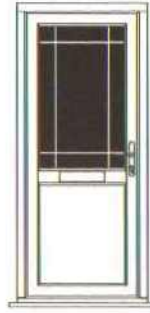


Bourne  
E C03

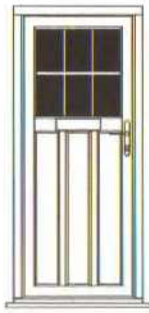

Boxmoor  
H C05

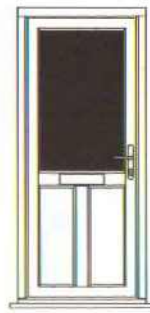


Chiswell  
E C03

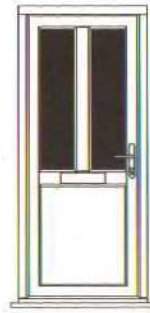


Colney  
E C03 F




Cuffley  
F C03

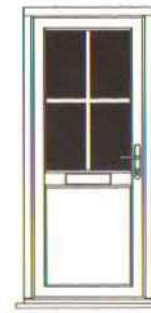


Elstree  
G C03

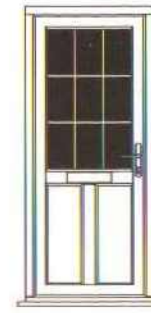


Langley  
F C03

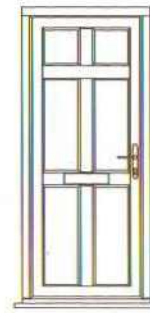


Maple  
G C05

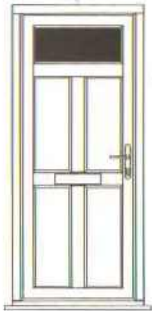


Nash  
F C05

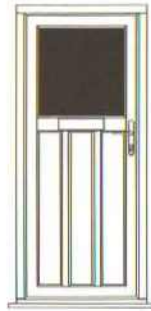


Tewin  
F C05

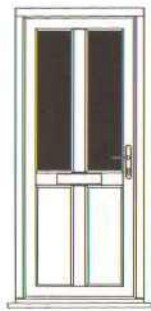


Warner  
F C03

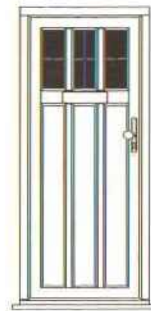

Waterford  
H C05

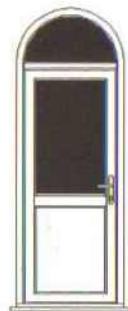

Chapmore  
I C04

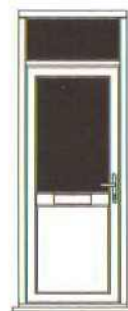

Gravenhurst  
H C04



Highfield  
J C04




Radlett  
G C04



Ridgeway  
E C02



Weston  
D C02

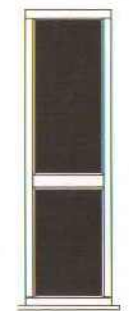


Bygrave  
A C01




Graveley  
A C01




Amwell  
C C03

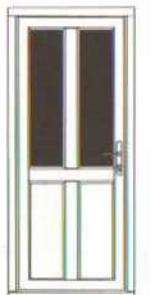


Ashwell  
E C03

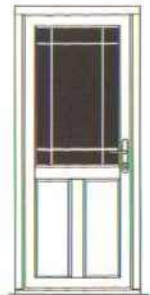


Aston  
E C03

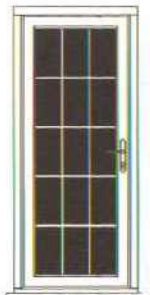

Barwick  
D C01

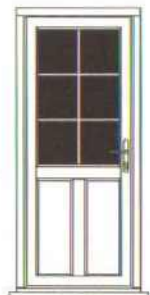

Hadham  
F C03

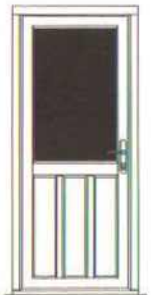

Kelshall  
E C03




Lilley  
C C01



Norton  
D C03



Oakland  
G C05

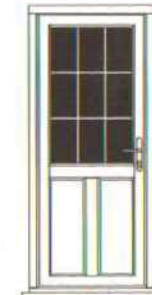

Standon  
F C03



Thorley  
F C03



Wilstone  
B C01